

# Installation guide

## Vaude Drive Van tent

Watch the video:

[youtube.com/watch?v=nI\\_kHGRtgPI](https://www.youtube.com/watch?v=nI_kHGRtgPI)



Lay the tent tarp on the ground so that the Vaude logos are visible (pic. 1).





Insert the rods of the center beam (orange ends) into each other.

Then hook the two ends into the eyelets, on the red tabs on the tent. (pic. 2 + 3).








Click the lateral clips into the main beam (pic. 4 + 5).

Tip:  
*Do not click the top 3-4 clips yet. Only at the end, when all other steps are completed, to reduce the tension on the bars in the following steps.*



Plug the two lateral beams together and into the joint of the main beam afterwards (pic. 6).

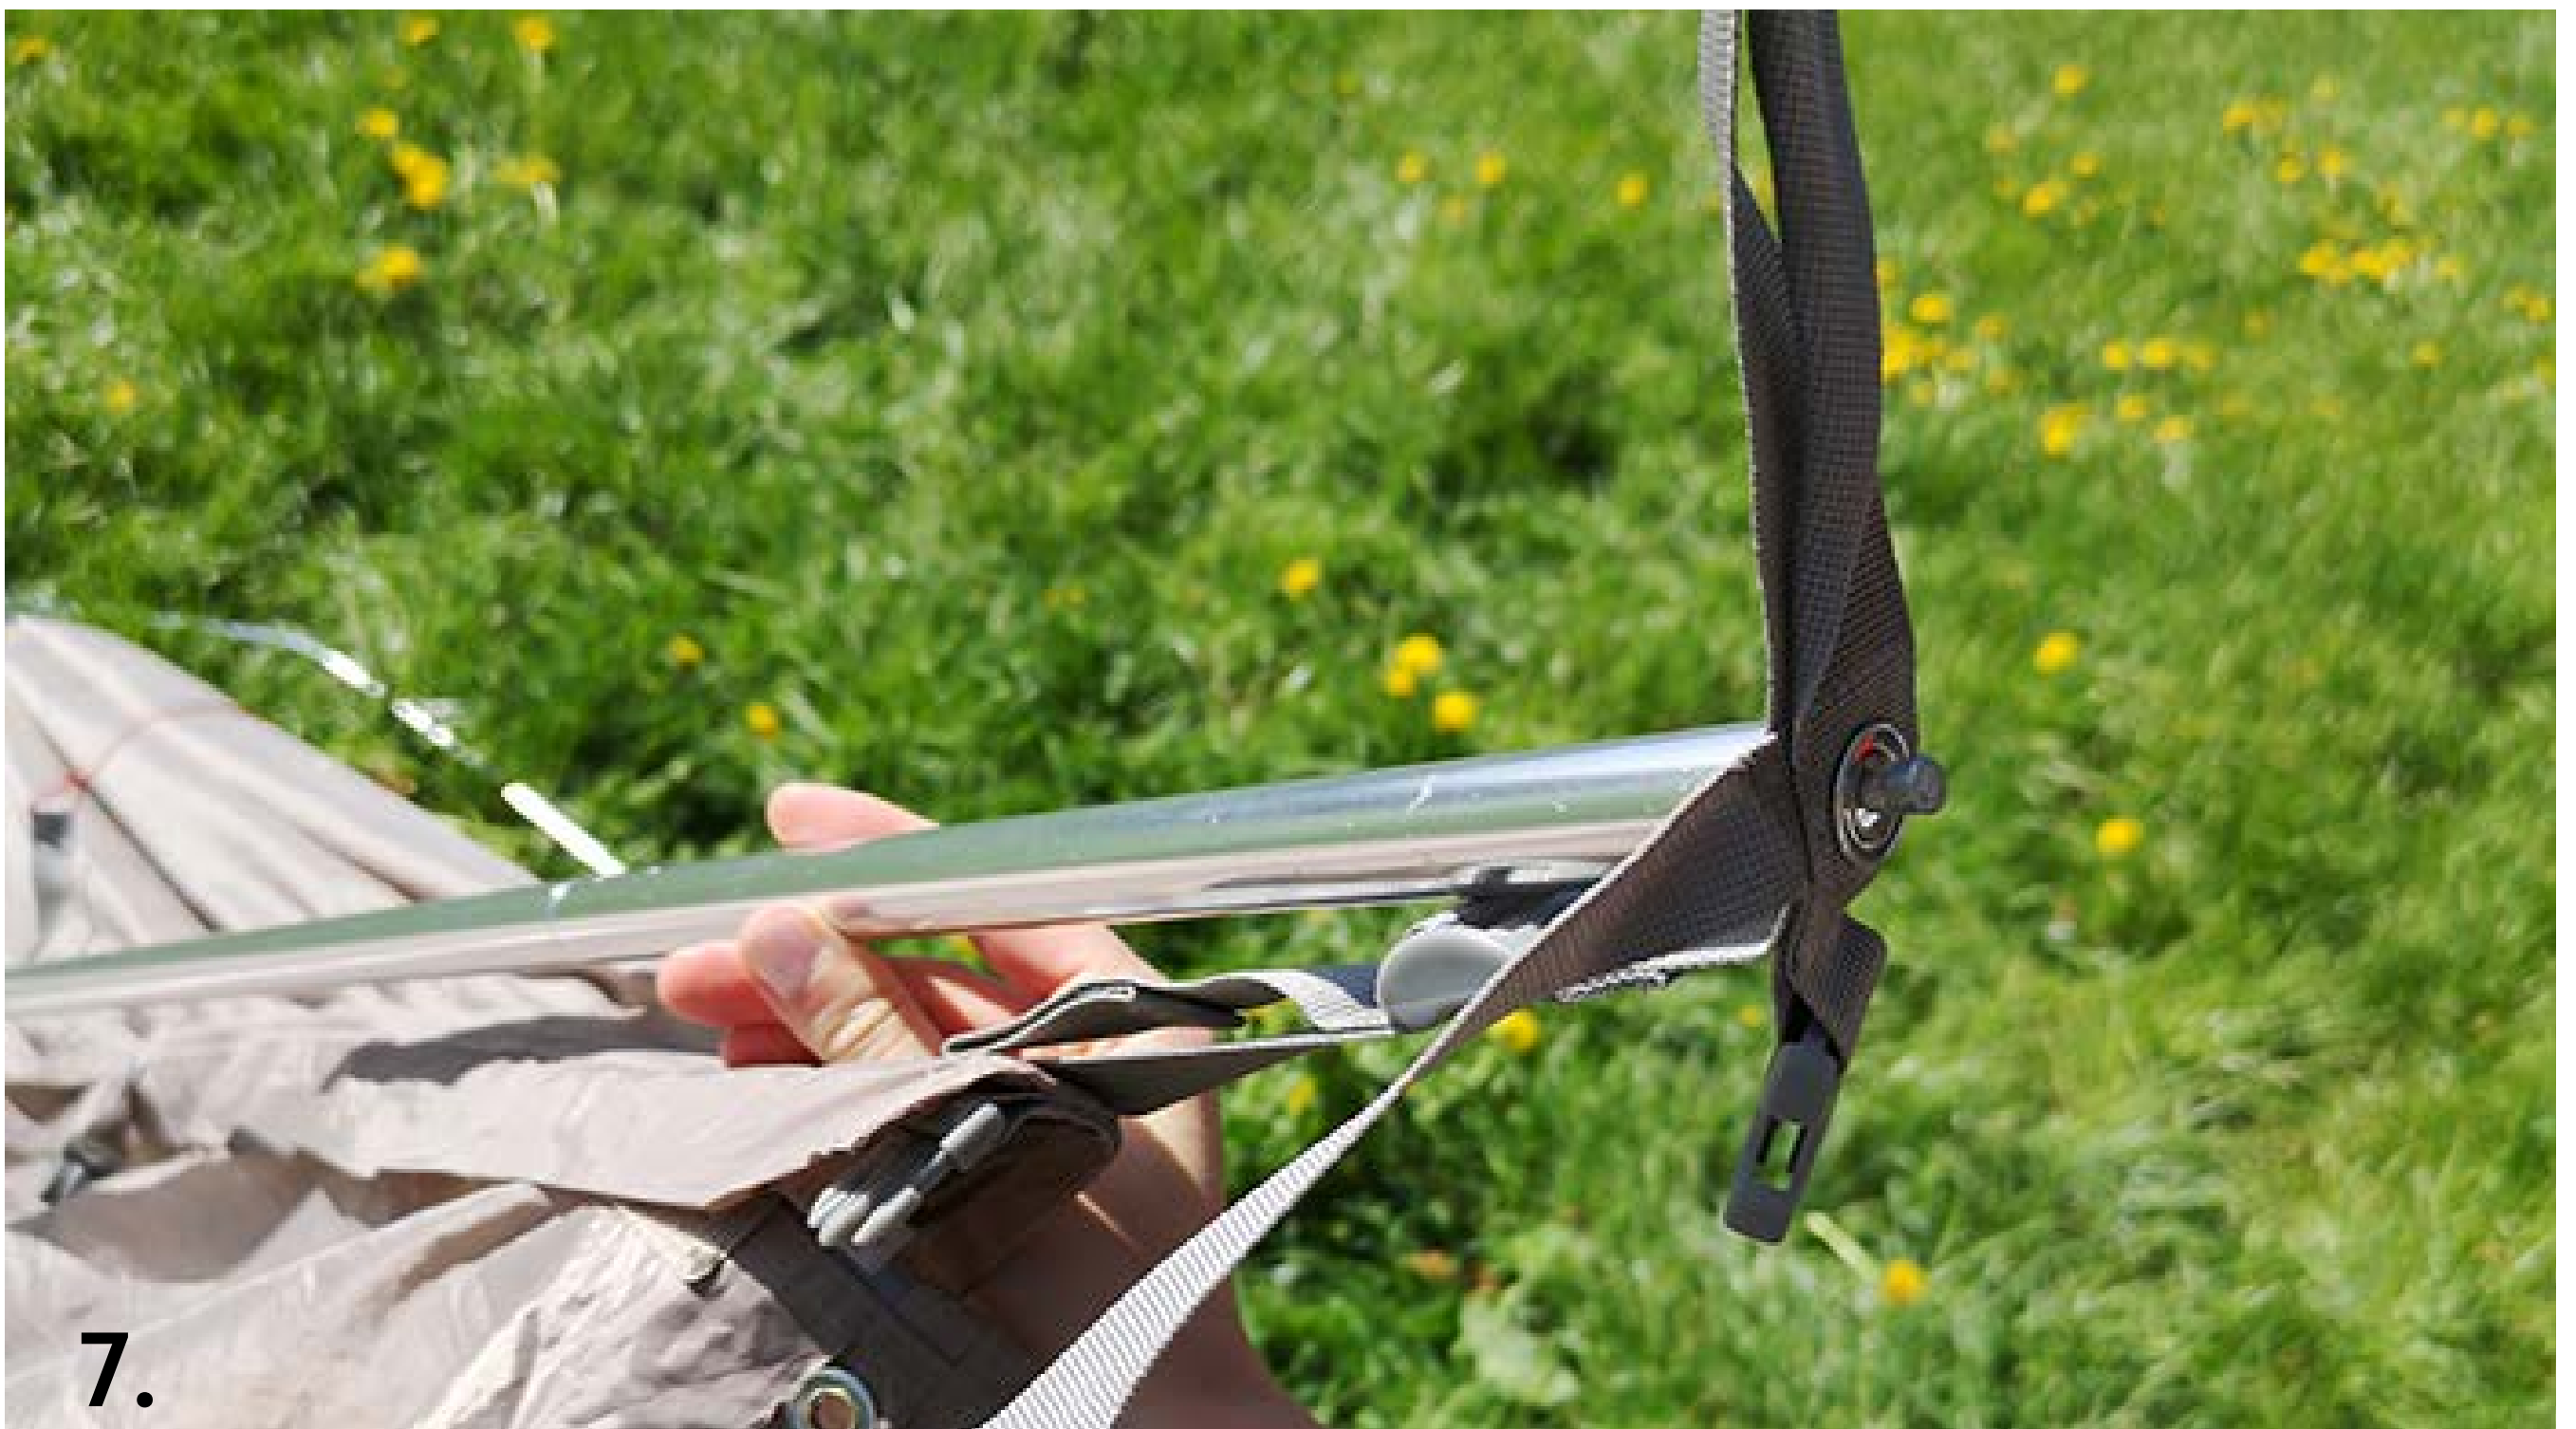

Hook the ends into the eyelets on the gray straps of the tent tarp (pic. 7).

The clips of the side beams are hooked in only at the end.



Put the two short beams together and into the other side of the connector (pic. 8).





Now lift the tent and lever the short beams down, thereby stretching the tent. Insert the plugs on the tent tarp into the short beams (pic. 9 + 10).





Click the remaining clips into the beams and the tent is ready (pic. 11).

If you have any further questions please contact us:  
+49 (0) 8063 / 20 760 - 0 oder [info@vanessa-mobilcamping.de](mailto:info@vanessa-mobilcamping.de)

VanEssa mobilcamping | Lauser Strasse 27 | 83620 Grosshöhenrain | Deutschland  
Tel. +49 (0) 8063/20 760-0 | [info@vanessa-mobilcamping.de](mailto:info@vanessa-mobilcamping.de)