


# Installation guide

## Arco-System - Spacetourer XS,M,XL / Pössl Vanster / Traveller L2,L3 / Proace Verso L1,L2 / E-Ulysee / Zafira Life M,L

### 1. Arco tunnel installation

- The rearmost seat row has to be removed with all wheelbases.
- Remove the screws of the rear tie-down rings and take the rings out (pic. 1).
- Place the tunnel(s) in the boot, with the bore holes over the tie-down rings (pic. 2).
- Draw out the pullout completely (Caution: Place something under it, for the tunnel not to tilt) and screw the tunnel with the included countersunk screw into the thread of the tie-down ring in the boot (pic. 3a).
- Inside the car, thread the blocks of the mounting screws into the rails and fasten the hand screws (pic. 3b).
- When using only one tunnel, hang the bed extension into the connection points on the side of the tunnel and place the stand upright (pic. 4).

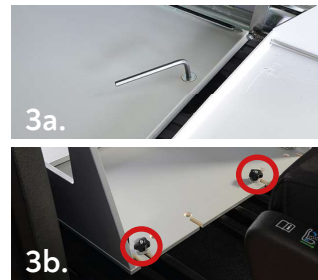

### 2. Bed system assembly

- Lift the front edge of the sleeping board a little and pull it into the passenger compartment until it engages in the connection points of the tunnel(s). The wooden pillar swings out automatically (pic. 5).
- Unfold the mattress(es) into the passenger compartment...and have a good sleep on our cosy VanEssa bed (pic. 6).

### Kitchen assembly:

- When using the kitchen in the tunnel, lift it into the pullout with the drawers facing inwards (pic. 7).
- Secure the kitchen module with the included screw on the outer side (pic. 8).
- Place the coolbox on the console next to the kitchen module. Lead the cable under the console and plug the coolbox in (pic. 7).
- Trimm the cable length, clip it into the plastic plug and push the plug from the outside into the cutout on the side of the tunnel (pic. 9).



### 3. Storing

- While driving with the sleeping board(s) in storage position, make sure that the bore holes on the bottom are engaged in the fittings of the tunnel/bed extension - especially when it is used without any seats (safety reasons).
- As an additional fastening, you can fix board(s) and mattress(es) with tension belts (pic. 10).

If you have any further questions please contact us:

+49 (0) 8063 / 20 760 - 0 or [info@vanessa-mobilcamping.de](mailto:info@vanessa-mobilcamping.de)

VanEssa mobilcamping | Lauser Strasse 27 | 83620 Grosshöhenrain | Germany  
Tel. +49 (0) 8063/20 760-0 | [info@vanessa-mobilcamping.de](mailto:info@vanessa-mobilcamping.de)