

Installation guide

Kitchen module - T5/T6/T6.1 Multivan/Beach

VanEssa
mobilcamping

ALWAYS close the drawers and lock it before driving! Otherwise the drawers could damage the tower.

1. Installation & Fastening

- The drawers can be taken out in order to reduce the kitchen's weight.

Note: Push the orange clips at the bottom of the drawers simultaneously and take it out (pic. 6).

- Place the kitchen tower behind the driver's seat (in the preferred driving position), with the slots in the bottom of the module over the rails (pic. 1).

- Put the T of the hammerhead screw through the slots into the rails, twist and fasten it (pic. 2-4).

Note: The hammerhead screws are being anchored *shifted* in the notches of the indentation on the underside of the airline rails. Therefore the T of the hammerhead screws doesn't engage exactly in a 90° angle.

- Now you can place the drawers on the rails and push them into the tower. It will automatically click in position.

- Put the cable from the tower into a 12 Volt socket (pic. 5).




2. Pull-out table

- Open the second drawer and pull the above table out by grabbing the little notch at the bottom (pic. 7).

- Once in a while the table can clamp. If so, push the plate to unlock and then pull again.

- While extended, the table rests on the second drawer. The drawer needs to be pulled out at least half length (pic. 8+9).

- Always insert the drawer first and the table afterwards.

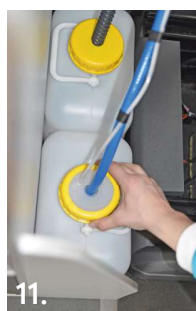

3. Water tank

- For refill/removal of the tanks, push the driver's seat to the front and also flap the backrest (pic. 10).

- Unscrew the cover and remove the tanks (pic. 11).

- Empty water tank and hose completely after touring to avoid frost damage, calcification, bacteria etc..

4. Kitchen tower with toilet

-When using the toilet, place the delivered board in front of the lower drawer to give supplementary stability to the drawer.

- We recommend to place a little rug above the board (pic. 12+13).



5. Kitchen tower with coolbox

- Place the coolbox on the pullout of the bottom drawer (tilt the box a little to the back).

- Before closing the drawer, plug in the 12V-cable to the coolbox - the access to the back of the coolbox is unhandy if the drawer is engaged.

- Draw the included spring with the screw in one of the threads at the back of the coolbox, then hang the spring into the cable. This avoids the cable to be clamped (pic. 14).

- We recommend not to prolong the included 12V-cable.

If you have any further questions please do not hesitate to contact us:
+49 (0) 8063 / 20 760 - 0 or info@vanessa-mobilcamping.de