


Installation guide

VanEssa
mobilcamping

Surfer bed splittable - Spacetourer XS,M,XL / Pössl Vanster / Traveller L1,L2,L3 / Zafira Life S,M,L / E-Ulysee / ProAce Verso compact,L1,L2

1. Rear board installation

- The rearmost seat row has to be removed with all wheelbases (pic. 1).
- Lift the rear board inside the vehicle (pic. 2).
- Plug the mounting screws left + right through the slot in the aluminium angle, with the slot nuts threaded into the rail.
- Fasten the knob until the slot nut gets pulled to the underside of the rail (pic. 3).
- Mount the adjusting screws on both sides until they are fixed with the vehicle lining (pic. 4).

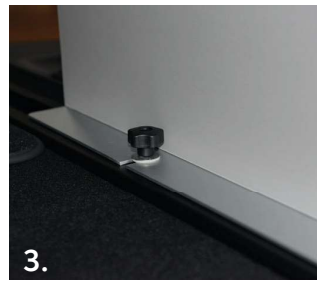

2. Bed system assembly

- Flap the front seat row and push it to the back maximally (pic. 5).
- Lift the front edge of the sleeping board a little and pull it into the passenger compartment until it engages in the connection points. The wooden pillar swings out automatically (pic. 6/8).
- Unfold the mattress(es) into the passenger compartment...and have a good sleep on our cosy VanEssa bed (pic. 7/9).



3. Storing

- While driving, the sleeping board lies on the rear board. For safety reasons, make sure that the bore holes on the bottom of the folding board are engaged in the fittings of the rear board.
- As an additional fastening, we recommend the use of a tension belt - especially when the surfer bed is used without any seats (pic. 10).

If you have any further questions please contact us:
+49 (0) 8063 / 20 760 - 0 or info@vanessa-mobilcamping.de

VanEssa mobilcamping | Lauser Strasse 27 | 83620 Grosshöhenrain | Germany
Tel. +49 (0) 8063/20 760-0 | info@vanessa-mobilcamping.de