
Installation guide

Bed system VW Touran I (until 08/2015)

1. Rear board installation

- Remove one of the screws of the tie-down rings. The tie-down ring itself and the second screw remain (pic. 1). 5-seater without trunk floor: Remove each the rear screw of the two inner tie-down rings (pic. 2a) 7-seater/5-seater with floor: Remove the two inner and the two rear tie-down rings (pic. 2b)
- Lift the rear board into the vehicle. Tilt it a little for easier access (pic. 3).
- Fix the rear board by tightening the star knob screws into the threads of the tie-down rings (pic. 2a+2b).
- Mount the adjusting screws on both sides until they are fixed with the vehicle lining (pic. 4).



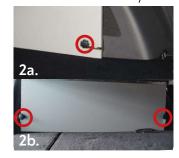





VanEssa

mobilcamping

2. Bed system assembly

- Fold the back seats (pic. 5).
- Open the folding bracket and put the open folding bracket behind the front seats (pic. 6).

 Note: To close the bracket, press the feather buttons and flap the feet into the aluminium profile.
- Lift the front edge of the sleeping board a little and pull it into the passenger compartment untill it engages in the connection points of the rear board and the folding bracket (pic. 7).
- Push driver's and co-driver's seat to the front and fold them. Unfold the front part of the folding board (pic. 8).
- Unfold the mattress into the passenger compartment...and have a good sleep on our VanEssa bed (pic. 9+10).













3. Storing

While driving with the folding board in storage position, make sure that the bore holes on the bottom are engaged in the fittings of the rear board - especially when it is used without any seats (safety reasons). As an additional fastening, you can fix board and mattress with tension belts (pic. 11).



If you have any further questions please contact us: +49 (0) 8063 / 20 760 - 0