

Installation guide

Bed system -

Tourneo Custom/Tourneo Transit - short wheelbase

VanEssa
mobilcamping

1. Rear board installation

- Remove the lowermost screw of the two outer seat fastening rails (pic. 1).
- Place the mounting plate in the car and fasten it with the included M12 countersunk screws (pic. 2).
- Lift the rear board onto the mounting plate. Tilt it a little for easier access (pic. 3).
- Fix the rear board left and right to the mounting plate with the M6 countersunk screws (pic. 4).




2. Bed system assembly

- Open the folding bracket and put the open folding bracket into the passenger compartment (pic. 5).
- Note: To close the bracket, press the feather buttons and flap the feet into the aluminium profile.*
- Lift the front edge of the sleeping board a little and pull it into the passenger compartment until it engages in the connection points of the rear board (pic. 6).
- Place the sleeping board on the unfolded bracket (pic. 7).
- Unfold the mattress into the passenger compartment...and have a good sleep on our cosy VanEssa bed (pic. 8).

Assembly with front seat bench:

- Instead of the folding bracket the sleeping board rests on the flapped seat bench (pic. 9+10).

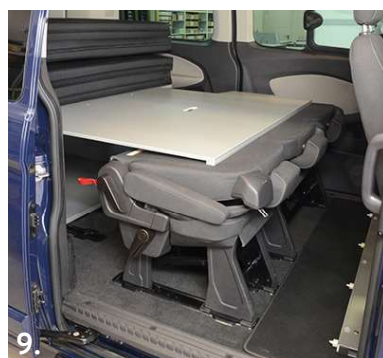

3. Storing

While driving with the sleeping board in storage position, make sure that the bore holes on the bottom are engaged in the fittings of the rear board - especially when it is used without any seats (safety reasons). As an additional fastening, you can fix board and mattress with tension belts (pic. 11).



If you have any further questions please contact us:
+49 (0) 8063 / 20 760 - 0

VanEssa mobilcamping | Lauser Strasse 27 | 83620 Grosshöhenrain | Germany
Tel. +49 (0) 8063/20 760-0 | info@vanessa-mobilcamping.de