Installation guide Module tower -

lanEssa

Spacetourer XL/Traveller L3/Proace Verso L2/Zafira Life L

1. Installation & Fastening

- Remove the drawers of the module tower to reduce weight.

Note: Push the orange clips at the bottom of the drawers simultaneously and take it out (pic. 7).

Variant 1:

- With 2 rails on the driver's side, place the two aluminum plates (pic. 2a/3) in one rail each behind the driver's seat.
- Place the tower module behind the driver's seat (in the preferred driving position), with the slots in the bottom of the module over the Aluminum plates (pic. 1).
- Push the screw hooks (pic. 2b) through the slots, hook them under the bolts and fasten them hand-tight (pic. 5). Variant 2:
- If there is only one rail on the driver's side, place the longer aluminum plate with 2 holes (pic. 4) in this rail.
- Place the tower module behind the driver's seat (in the preferred driving position), with the slots in the bottom of the module over the Aluminum plates (pic. 1).
- Push the screw hooks (pic. 2b) through each slots, hook them under the bolts and fasten them hand-tight (pic. 5).

Module with coolbox pullout: Put the cable from the tower into a 12 Volt socket (pic. 6).







- Open the second drawer and pull the above table out by grabbing the little notch at the bottom (pic. 8).
- Once in a while the table can clamp. If so, push the plate to unlock and then pull again.
- While extended, the table rests on the second drawer. The drawer needs to be pulled out at least half length (pic. 9+10).
- Always insert the drawer first and the table afterwards.



3. Additional top cabinet

Place the top cabinet on the tower and use the two knurled screws to fix it (pic. 11+12).

In addition, fasten the attachment with a lashing strap to the headrest of the driver's seat (pic. 13+14).




4. Module tower T2



drawer to give supplementary stability to the drawer (pic. 15+16).

<u>Tip:</u> We recommend to place a little rug above the board.

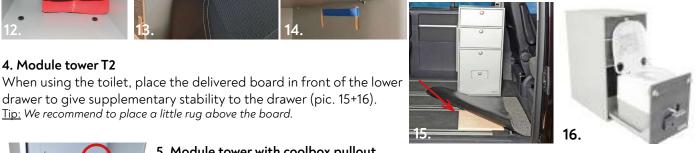



5. Module tower with coolbox pullout

- Place the coolbox on the pullout of the bottom drawer (tilt the box a little to the back).
- Before closing the drawer, plug in the 12V-cable to the coolbox.
- Draw the included spring with the screw in one of the threads at the back of the coolbox, then hang the spring into the cable. This avoids the cable to be clamped (pic. 17).
- We recommend not to prolong the included 12V-cable.

Für weitere Fragen sind wir gerne telefonisch unter +49 (0) 8063 / 20 760 - 0 für Sie da.