

Installation guide

Module tower - T5/T6 Transporter/Caravelle



VanEssa
mobilcamping

ALWAYS close the drawers and lock it before driving! Otherwise the drawers could damage the tower.

1. Installation & fastening

Note: The installation of a module tower in the VW T5/T6 Transporter or Caravelle is not possible without a VanEssa-floor panel with included screw-in nuts (pic. 1).

- Remove the drawers of the module tower to reduce weight. To remove the drawers just press the orange clips and pull out the drawers (pic. 6).
- Place the tower behind the driver's seat (in driving position) with the slots exactly above the screw-in nuts (pic. 2).
- Fasten the module tower with the two included star knob screws (pic. 2+3).
- Now you can place the drawers on the rails and push them into the tower. It will automatically click in position.
- Module tower T3 with coolbox: Put the cable from the tower into a 12 Volt socket (pic. 5).

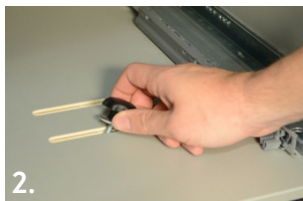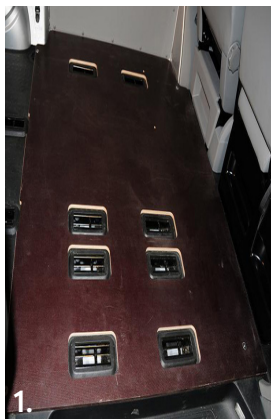


2. Pull-out table (included with all models)

- The pull-out table is located below the first drawer.
- Open the second drawer and pull the table out by grabbing the little notch at the bottom (pic. 7).
- Once in a while the table can tilt. If it doesn't work instantly, push a little bit first and then pull again.
- While extended, the table rests on the second drawer. The drawer has to be pulled out at least half length (pic. 8+9).



3. Additional top cabinet (optional for all models)

Place the top cabinet on the tower and use the two knurled screws to fix it (pic. 10-12).

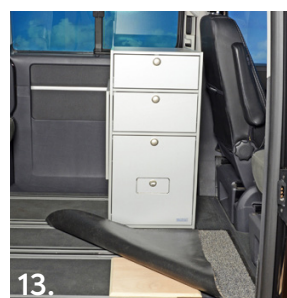

4. Module tower T2 with toilet

When using the toilet, place the delivered board in front of the lower drawer to give supplementary stability to the drawer. We recommend to place a little rug above the board (pic. 13+14).



5. Module tower with coolbox pullout/module tower T3 with kitchen

- Place the coolbox on the pullout of the bottom drawer (tilt the box a little to the back).
- Before closing the drawer, plug in the 12V-cable to the coolbox - the access to the back of the coolbox is unhandy if the drawer is engaged.
- Draw the included spring with the screw in one of the threads at the back of the coolbox, then hang the spring into the cable. The spring holds the cable up and thereby avoids the cable to be clamped between the rails of the drawer (pic. 15).

If you have any further questions please do not hesitate to contact us:
+49 (0) 8063 / 20 760 - 0 or info@vanessa-mobilcamping.de