

Installation guide

VanEssa
mobilcamping

Packing bags

VW T5/T6/T6.1 Multivan/Caravelle/Beach



Mounting parts (included):

- per bag 2 foam chunks fastened to the bags with Velcro stripes (for Beach, pic. 3).

- Take notice of the correct side: the VanEssa logo shows towards the boot (pic. 1).

Note: In order to avoid moisture behind the bags, take them out from time to time and let them dry during the day.

a) Multivan/Caravelle with sun blinds (from downwards)

- Thread the rear panel of the packing bags behind the sun blind hooks (red arrow pic. 2) or respectively the sun blinds (pic. 3), then push the bags into the window.

- The included foam chunks or only needed for the installation of the packing bags into the Beach. They have to be removed, when the packing bags are used with a Multivan/Caravelle.

b) Beach (from facelift 2010)




c) Multivan (Startline)/Caravelle - without sun blinds but with linings

- Instead of the „missing“ front sun blind hook, plug the Z-angles between lining and window (pic. 4).

Note: If the Z-angles cannot be plugged in (due to tolerances in the distance between window and lining), remove the fleece tape from the Z-angles. If they are necessary and not attached, stick the fleece tapes onto the angles.

- Then thread the rear panel of the packing bags behind the Z-angles (pic. 4) and the sun blind hook (pic. 5) and push the bags into the window slot.

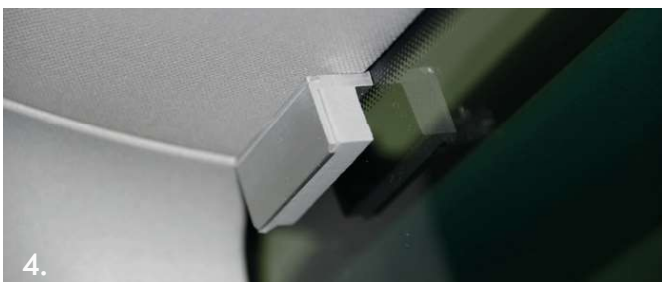

If you have any further questions please contact us: +49 (0) 8063 / 20 760 - 0