

Installation guide

VanEssa
mobilcamping

Packing bags without linings - T5/T6/T6.1 - Transporter/Multivan (Startline)/Beach (befor 2010)



Mounting parts (included):

- per bag two Z-angles (pic. 2)
- per bag one aluminium bars (pic. 4)

- Take notice of the correct side: the VanEssa logo shows towards the boot (red arrow pic. 1).


Note: In order to avoid moisture behind the bags, take them out from time to time and let them dry during the day.

1. Installation of the mounting kit

- Plug the Z-angles on both sides of the window between lining and window glass (pic. 2).

Note: If the Z-angles cannot be plugged in (due to tolerances in the distance between window and lining), remove the frieze band from the Z-angles. If they are necessary and not attached, stick the frieze band to the angles.

- Remove the left- and rightmost plug from the lower tin lining (pic. 3).
- Push the angles of the aluminium bars into the aperture of the tin lining (pic. 4).

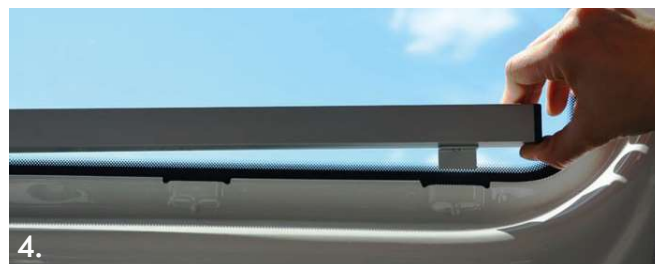

2. Packing bag installation

- Remove the supplied foam chunks. You can keep them as the case may be for compatibility with the T6 Beach.
- Then thread the rear panel of the packing bags behind the Z-angles (pic. 5) and push them onto the aluminium bars and completely into the window slot (pic. 6).



If you have any further questions please contact us: +49 (0) 8063 / 20 760 - 0