



Installation guide

Rear board

T5/T6/T6.1 Multivan/Beach

1. Rear board installation

- Lift the rear board inside the vehicle (pic. 1). Tilt the rear board a little in order to avoid damage to the linings of the vehicle (pic. 2).
 - The position for the rear board is 4,5 cm (T5/T6/T6.1 Multivan) respectively 11 cm (T5/T6/T6.1 Beach) from the edge of the door sill protection (pic. 3).
 - The rear board is fixed with a hammerhead screw on each side (pic. 4).
 - Put the T of the hammerhead screw through the slots into the rails. By dint of the neoprene disc, jack-knife the T and finally tighten the knob while holding the T-part in position (pic. 5).
- Note: The hammerhead screws are being anchored shifted in the notches of the indentation on the underside of the airline rails. Therefore the T of the hammerhead screws doesn't engage exactly in a 90° angle.*
- Mount the adjusting screws on both sides until they are fixed with the vehicle lining (pic. 6).

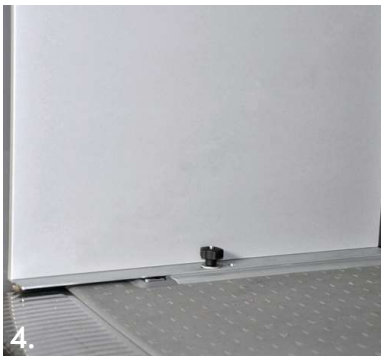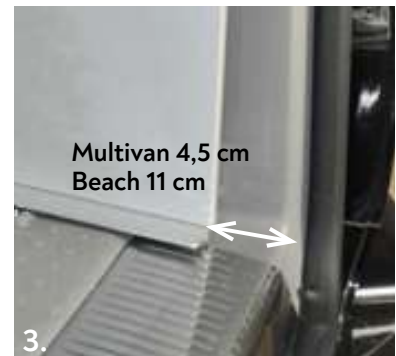

2. Storing

While driving, the rear board is used for the storage of the mattress. This simply lies folded on top of the rear board (pic. 7).



If you have any further questions please contact us: +49 (0) 8063 / 20 760 - 0