

# Installation guide

## Storing box - T5/T6/T6.1 Multivan/Beach

VanEssa  
mobilcamping

### 1. Preparation & installation

#### Storing box without toilet:

- Put the T of the hammerhead screw through the slots into the rails. By dint of the neoprene disc, jack-knife the T and finally tighten the knob while holding the T-part in position (pic. 2).


Note: The hammerhead screws are being anchored *shifted* in the notches of the indentation on the underside of the airline rails. Therefore the T of the hammerhead screws doesn't engage exactly in a 90° angle.

#### Storing box with toilet:

- Remove the covers of the rails (pic. 1a T6, pic. 1b T5).
- Put the screws through the holes in the bottom of the box and tighten the wooden thread blocks as little (pic. 3).

Note: Look out for the bigger bore hole with the wing nut showing away from the storing box. Otherwise the wing nut can be ripped out of the wooden block, when finally tightening the screws (pic. 3).

- Put the storing box behind the driver's seat, so that the thread blocks fit in the slots of the rail system (pic. 4).
- Push the box away from the driver's seat to reassemble the covers of the rails.
- Push the box to the desired position on the rails and tighten the screws.

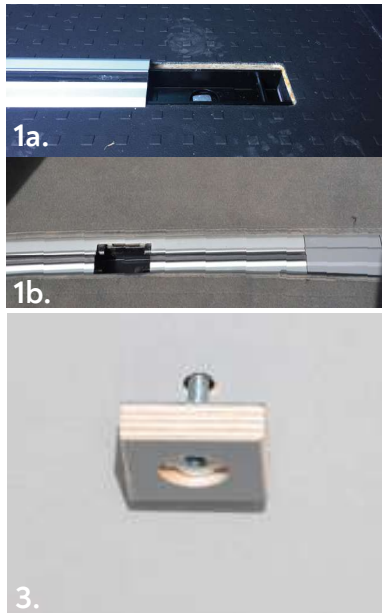

### 2. Use of the toilet

- For installation of the box, take the toilet out of the box (pic. 5).
- When using the box, open the seat cushion.

Note: With the smallest storing box (size 47 cm), the cushion needs to be opened to the back.

- For flushing the toilet, pull the handle through the cutout on the front side of the box (pic. 6).



5.



6.

If you have any further questions please contact us: +49 (0) 8063 / 20 760 - 0