


# Installation guide

## Surfer bed

### Mercedes Vito without rail system

#### 1. Rear board installation

- Remove the screws of the rear tie-down rings and take the rings out (pic. 1).
- Adapt the adjusting screws and the wooden plates on each side of the aluminium angles of the rear board (pic. 2).
- Position the rear board inside the vehicle and fix it on both sides by tightening a screw into the threads of the tie-down rings (pic. 3).
- Mount the adjusting screws on both sides until they are fixed with the vehicle lining (pic. 4).

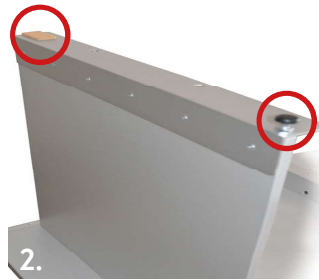

#### 2. Bed system assembly

- Lift the front edge of the sleeping board a little and pull it into the passenger compartment until it engages in the connection points. The wooden pillar swings out automatically (pic. 5).
- Unfold the mattress into the passenger compartment...and have a good sleep on our cosy VanEssa bed (pic. 6).
- With the long wheelbase, the front seat row can remain in the car, if it is tiltable (pic. 7).



5.



6.



7.



8.

#### 3. Storing

- While driving, the sleeping board lies on the rear board. For safety reasons, make sure that the bore holes on the bottom of the folding board are engaged in the fittings of the rear board.
- As an additional fastening, we recommend the use of a tension belt - especially when the surfer bed is used without any seats (pic. 8).

If you have any further questions please contact us: +49 (0) 8063 / 20 760 - 0