

## Textile blind installation T5/T6/T6.1

VanEssa  
mobilcamping

### Rear blind (plastic linings):


- Drill a 3mm hole into both corners and mount the Tenax screws with a 9mm socket (pic. 1).
- Plug the tenax buttons in at the corners, then mark and drill the inner 3mm holes and mount the Tenax screws with a 9mm socket (pic. 2+3)
- Drill holes at the upper end of the back door and fix screws (pic. 3+4).
- If wanted use frieze band as (optional) fastening (pic. 5).
- To open the Tenax screws, pull the Tenax buttons with the fingers off the bolts.

### Rear blind (no linings):

- Fix the rear blind with the stitched magnets to the inner side of the windows (pic. 6)

### Lateral blinds (2 or 4 parts):

- Hang the wooden bar into the hooks of the sun blinds (pic. 7).
- If wanted use frieze band as (optional) fastening (pic. 8).

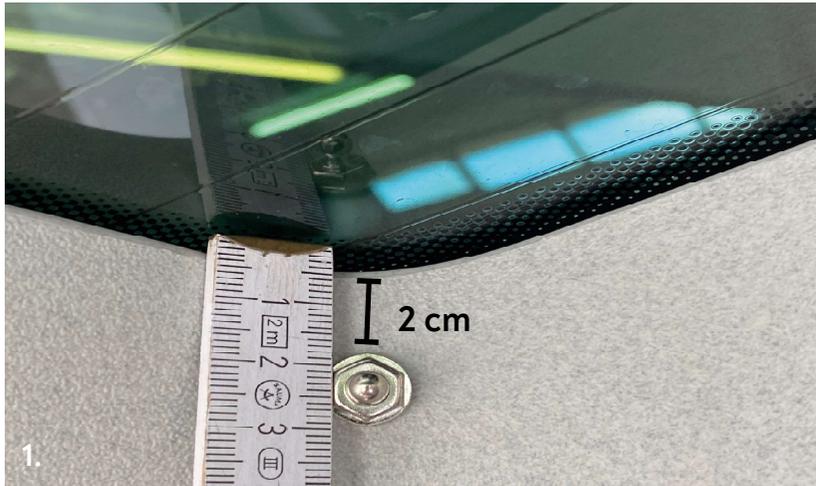

If you have any further questions please contact us: +49 (0) 8063 / 20 760 - 0 or [info@vanessa-mobilcamping.de](mailto:info@vanessa-mobilcamping.de)