

# Installation guide

## V1(n)/V2(n) V2 kitchen -

## Viano (Fun) / V-Klasse / Vito with rail system / Pössl Vanstar

### 1. Installation (figures with low kitchen, but technically no difference)

- The drawers can be taken out in order to reduce the kitchen's weight.

*Note:* Push the orange clips at the bottom of the drawers simultaneously and take it out (pic. 6).

- Put a slot nut into the outer rails 60 cm from the tailgate or about 29 cm from the end of the rail. Make sure they lie horizontally (pic. 1+2)

- As an alternative, you can also use the threads of the original seat mountings instead of the slot nuts (pic. 3).



### 2. Fastening

- Lift the kitchen into the car and push it into the booth until the bore holes match with the slot nuts/original seat mountings.

*Tip:* For a more convenient installation we recommend the use of our mounting trolley (pic. 5).

- Fasten the screws through the holes at the backside of the kitchen into the slot nuts (pic. 7+8).

- Push the drawers back into the kitchen until they engage (pic. 9).




### 3. Electrics & Water tank

- Plug the cable from the kitchen into a 12 Volt socket. Draw the included spring with the screw in one of the threads at the back of the coolbox. The spring holds the cable up and thereby avoids the cable to be clamped (pic. 10+11).

- The opening lid must be adjacent to the fridge/freezer. The water hose has to be placed like a loop (pic. 12).

- Empty water tank and hose completely after touring to avoid frost damage, calcification, bacteria etc..

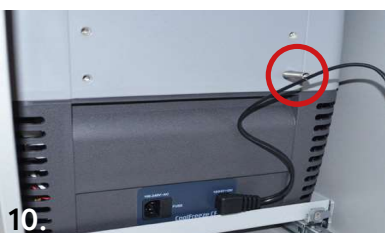

If you have any further questions please do not hesitate to contact us:  
+49 (0) 8063 / 20 760 - 0 or [info@vanessa-mobilcamping.de](mailto:info@vanessa-mobilcamping.de)