

Installation guide

V1(T) kitchen

VW T5/T6/T6.1 Transporter/Caravelle

VanEssa
mobilcamping

1. Installation

- Remove the screws of the rear tie-down rings and take the rings out. The plastic covering remains (pic. 1).
- Fix the aluminium band by tightening the M10 screws into the threads of the tie-down rings (pic. 2+3).
- The drawers can be taken out in order to reduce the kitchen's weight.

Note: Push the orange clips at the bottom of the drawers simultaneously and take it out (pic. 6).

- Lift kitchen into the boot (pic. 4). Push it inwards until about 5.5 cm from the edge of the door sill protection (pic. 5).

Tip: For a more convenient installation we recommend the use of our mounting trolley.





2. Fastening

- Fix kitchen by tightening the included M6 star knob screws through the kitchen's bottom into the aluminium band (pic. 7+8).
- Push the drawers back into the kitchen until they engage (pic. 9).



3. Electrics & Water tank

- Plug the cable from the kitchen into a 12 Volt socket. Draw the included spring with the screw in one of the threads at the back of the coolbox. The spring holds the cable up and thereby avoids the cable to be clamped (pic. 10+11).
- The opening lid must be adjacent to the fridge/freezer. The water hose has to be placed like a loop (pic. 12).
- Empty water tank and hose completely after touring to avoid frost damage, calcification, bacteria etc..

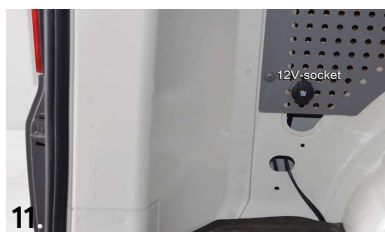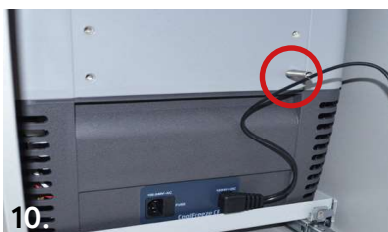

If you have any further questions please do not hesitate to contact us:
+49 (0) 8063 / 20 760 - 0 or info@vanessa-mobilcamping.de

VanEssa mobilcamping | Lauser Strasse 27 | 83620 Grosshöhenrain | Germany
Tel. +49 (0) 8063/20 760-0 | info@vanessa-mobilcamping.de