

Installation guide

V1(n) kitchen -

Opel Vivaro B life/Renault Trafic III Spaceclass


VanEssa
mobilcamping

1. Installation

- The drawers can be taken out in order to reduce the kitchen's weight.

Note: Push the orange clips at the bottom of the drawers simultaneously and take it out (pic. 3).

- Place the slot nut (pic.1 a) into the outer rails (pic. 2). Note that the plates are horizontal in the rail and a little further in the van, so that they do not lie under the kitchen afterwards.

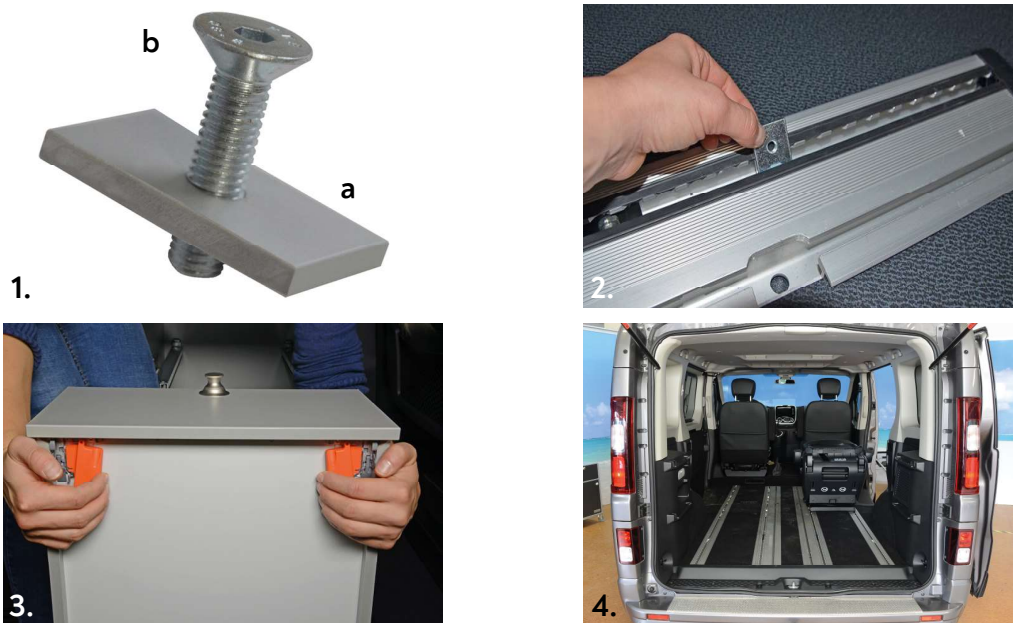

2. Fastening

- Lift the kitchen into the car and push it into the booth until the bore holes match with the slot nuts.

Tip: For a more convenient installation we recommend the use of our mounting trolley

- To position the kitchen correctly, close the tailgate. In the van, slide the kitchen into the rear so far that there is only room for one finger between the tailgate and the kitchen.

- Fasten the screws through the holes at the backside of the kitchen into the slot nuts (pic. 5+6).

- Push the drawers back into the kitchen until they engage (pic. 7).



3. Electrics & Water tank

- Plug the cable from the kitchen into a 12 Volt socket. Draw the included spring with the screw in one of the threads at the back of the coolbox. The spring holds the cable up and thereby avoids the cable to be clamped (pic. 8+9).

The opening lid must be adjacent to the fridge/freezer. The water hose has to be placed like a loop (pic. 10).

- Empty water tank and hose completely after touring to avoid frost damage, calcification, bacteria etc..



If you have any further questions please do not hesitate to contact us: +49 (0) 8063 / 20 760 - 0