

Installation guide



V2 kitchen

Berlingo III/Rifter/Combo E (from 2018)

VanEssa
mobilcamping


1. Installation

- Remove the left and right drawers of the kitchen to reduce weight. To remove the drawers just press the orange clips and pull out the drawers (pic. 6).
- Flap the rear tie-down rings up before kitchen installation (pic. 1).
- Place the kitchen in the back of the vehicle (pic. 2). For a more convenient installation we recommend the use of our mounting trolley (pic. 5).
- Loosen the knurled crews (pic. 3). Caution: Loosen only a little, so the aluminium plate doesn't get lost.
- Push screw including plate to the outside under the tie-down rings and fasten the knurled screw (pic. 4).

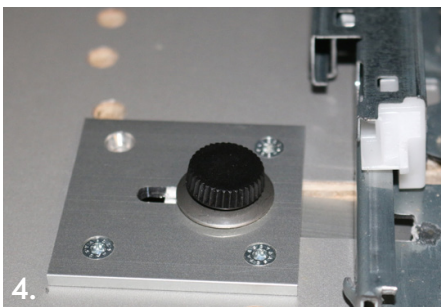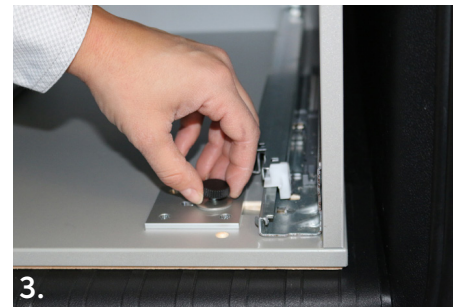


2. Fastening

- Thread the included lashing straps through the inner tie-down rings (pic. 7).
- Secure the kitchen on the back with the two lashing straps. Hang them in the hooks on the kitchen extension and tighten the straps (pic. 8+9).

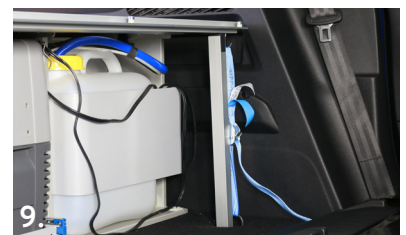

3. Electrics & Water tank

- Plug the cable from the kitchen into a 12 Volt socket. Draw the included spring with the screw in one of the threads at the back of the coolbox. The spring holds the cable up and thereby avoids the cable to be clamped (pic. 10+11).
- The opening lid must be adjacent to the fridge/freezer. The water hose has to be placed like a loop (pic. 12).
- Empty water tank and hose completely after touring to avoid frost damage, calcification, bacteria etc..

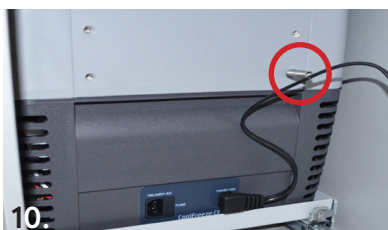

If you have any further questions please do not hesitate to contact us:
+49 (0) 8063 / 20 760 - 0 or info@vanessa-mobilcamping.de