

# Installation guide

## V2 kitchen - Citroen Berlingo II/ Peugeot Partner (2008 to 2018 )

VanEssa  
mobilcamping

### 1. Installation


- The drawers can be taken out in order to reduce the kitchen's weight.

*Note: Push the orange clips at the bottom of the drawers simultaneously and take it out (pic. 6).*

- Excavate the rear tie-down rings und remove the screws (pic. 1).

- Place the long nuts over the threads and fix the aluminium band with the countersunk screws (pic. 2-4).

*Note: The long nut operates as a distance holder.*

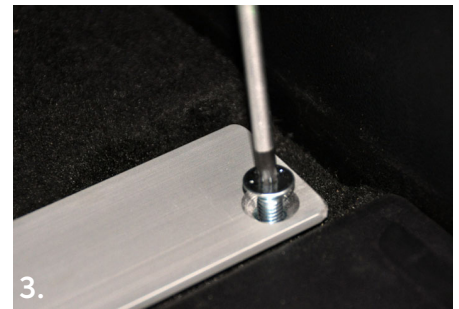

### 2. Fastening

- Place the kitchen in the vehicle (pic. 5). For an easy installation we recommend our mounting trolley (pic. 7).  
- Screw the star knob screws left and right through the lowermost of the three adjacent holes (not the fourth a little staggered one) into the installed aluminium band (pic. 8).

*Note: To find the thread of the aluminium band easier, plug a screwdriver into the hole, lift the kitchen a little and arrange the kitchen above the thread of the aluminium band.*

- Push the drawers back into the kitchen until they engage (pic. 9).




### 3. Electrics & Water tank

- Plug the cable from the kitchen into a 12 Volt socket. Draw the included spring with the screw in one of the threads at the back of the coolbox. The spring holds the cable up and thereby avoids the cable to be clamped (pic. 10+11).

- The opening lid must be adjacent to the fridge/freezer. The water hose has to be placed like a loop (pic. 12).

- Empty water tank and hose completely after touring to avoid frost damage, calcification, bacteria etc..

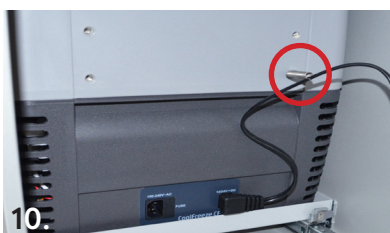

If you have any further questions please do not hesitate to contact us:  
+49 (0) 8063 / 20 760 - 0 or [info@vanessa-mobilcamping.de](mailto:info@vanessa-mobilcamping.de)

VanEssa mobilcamping | Lauser Strasse 27 | 83620 Grosshöhenrain | Germany  
Tel. +49 (0) 8063/20 760-0 | [info@vanessa-mobilcamping.de](mailto:info@vanessa-mobilcamping.de)