

Installation guide

V2 kitchen -

Mercedes Vito without rail system

VanEssa
mobilcamping

1. Installation

- The drawers can be taken out in order to reduce the kitchen's weight.

Note: Push the orange clips at the bottom of the drawers simultaneously and take it out (pic. 5+6).

- Remove the screws of the rear tie-down rings and take the rings out (pic. 1).

- Fix the aluminium band with the countersunk screws into the threads of the tie-down rings (pic. 2-4).



2. Fastening

- Lift the kitchen into the car and push it into the booth until the bore holes match with the aluminium band.

Tip: For a more convenient installation we recommend the use of our mounting trolley.

- Fix the kitchen with the M6 star knob screws left and right through the bottom of the kitchen into the threads of the aluminium band (pic. 7+8).

Note: To find the threads easier, plug a screwdriver into the hole, lift the kitchen a little and arrange it above the threads.

- Push the drawers back into the kitchen until they engage (pic. 9).




3. Electrics & Water tank

- Plug the cable from the kitchen into a 12 Volt socket. Draw the included spring with the screw in one of the threads at the back of the coolbox. The spring holds the cable up and thereby avoids the cable to be clamped (pic. 10+11).

- The opening lid must be adjacent to the fridge/freezer. The water hose has to be placed like a loop (pic. 12).

- Empty water tank and hose completely after touring to avoid frost damage, calcification, bacteria etc..

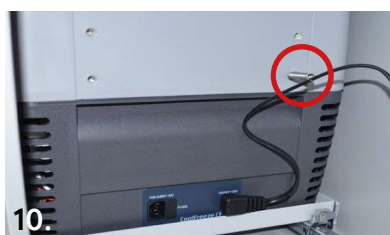

If you have any further questions please do not hesitate to contact us:
+49 (0) 8063 / 20 760 - 0 or info@vanessa-mobilcamping.de