

Installation guide

V3 kitchen -

Kangoo II/Citan I/NV 250

VanEssa
mobilcamping

1. Installation

- The bottom drawers on the left and on the right can be removed out in order to reduce the kitchen's weight (pic. 1).

Note: Push the orange clips at the bottom of the drawers simultaneously and take it out (pic. 6).

- Lift the kitchen into the back of the car, so that the inner tie-down rings fit in the slots of the aluminium angles (pic. 2+3).

Tip: For a more convenient installation we recommend the use of our mounting trolley (pic. 5).

- Flap up the rear tie-down rings (pic. 4).



1.



2.



3.



4.



5.




6.

2. Fastening

- Screw the M6 screw through the inner tie-down rings (pic. 7).
- Screw the knurled screws through the outer tie-down rings into the kitchen (pic. 8).
- Push the drawers back into the kitchen until they engage (pic. 9).



7.

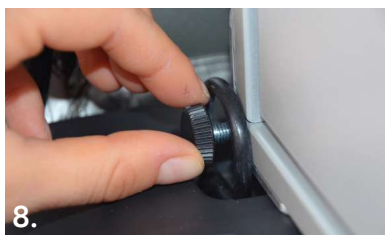

8.



9.

3. Electrics & Water tank

- Plug the cable from the kitchen into a 12 Volt socket. Draw the included spring with the screw in one of the threads at the back of the coolbox. The spring holds the cable up and thereby avoids the cable to be clamped (pic. 10+11).
- The opening lid must be adjacent to the fridge/freezer. The water hose has to be placed like a loop (pic. 12).
- Empty water tank and hose completely after touring to avoid frost damage, calcification, bacteria etc..



10.



11.



12.

If you have any further questions please do not hesitate to contact us:
+49 (0) 8063 / 20 760 - 0 or info@vanessa-mobilcamping.de