


Installation guide

Bed system - Skoda Yeti

VanEssa
mobilcamping

1. Rear board installation

- Dismantle the lateral fillets of the hat rack by removing the screws (pic. 1).
- Use the rearmost thread for fixing the aluminium angles (pic. 2).
- Place the rear board on the angles and the wheel housings (pic. 3).
- Fix the rear board on both sides to the angles with the star knob screws (pic. 4).

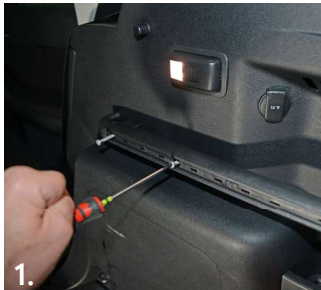

2. Bed system assembly

- Open the folding bracket and put the open folding bracket into the passenger compartment.

Note: To close the bracket, press the feather buttons and flap the feet into the aluminium profile.

- Hang the folding board to the connection points of the rear board and place it on the folding bracket (pic. 5).
- Move the front seats to the maximum front position and unfold the folding board (pic. 6).
- Fasten the lashing straps at the head rests of driver's and co-driver's seat (pic. 7).
- Unfold the mattress into the passenger compartment...and have a good sleep on our cosy VanEssa bed (pic. 8).

with back seats:

- all 3 seats: Place the folded folding bracket on the flapped seats (pic. 9).

- one/two seat(s): Unfold the one footrest on the side, where there is no seat. On the side with the seat(s), place the bracket with folded footrest on the back of the flapped seat(s) (pic. 10).



3. Storing

While driving with the sleeping board in storage position, make sure that the bore holes on the bottom are engaged in the fittings of the rear board - especially when it is used without any seats (safety reasons). As an additional fastening, you can fix board and mattress with tension belts (pic. 11).



If you have any further questions please contact us:

+49 (0) 8063 / 20 760 - 0

VanEssa mobilcamping | Lauser Strasse 27 | 83620 Grosshöhenrain | Germany

Tel. +49 (0) 8063/20 760-0 | info@vanessa-mobilcamping.de